

Wiring

Caution: To prevent severe shock or electrocution always turn the power OFF at the service panel before working with wiring.

Stripping the Insulation from the Wire:


Strip the insulation from the wire about 0.4 inch.

Connecting the Black and White Wires:

- 1. Turn the power "OFF"
- 2. Loosen both side screws using a flat screw-driver.
- 3. Insert neutral and live wire into the opening marked with N and L.
- 4. Tighten both side screws using the flat screw-driver.

Connecting the Green Wire:

Loop the wire clockwise 2/3 of the way around the screw.

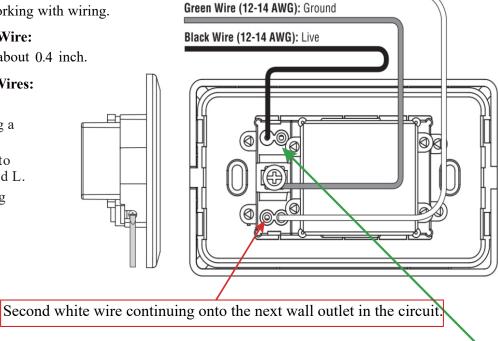


White Wire (12-14 AWG): Neutral

Second black wire continuing onto the next wall outlet in the circuit.


Installation

Recommended installation instructions:

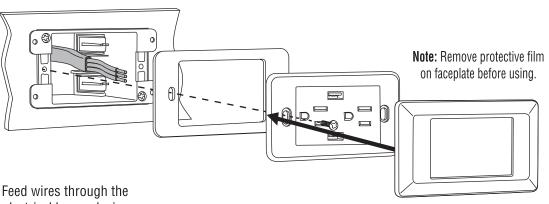

- 1: Feed wires through the electrical box and wire the receptacle according to the wiring instructions above.
 - **2:** Use included foam pad as necessary to reduce the faceplate gap.
- 3: Install the receptacle using screws to mount it to the electrical box.
 - **4:** Snap on the faceplate. Turn the power ON and check to make sure the sockets work.

Removal instructions:

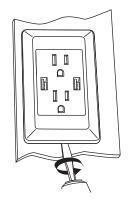

- 1: Insert a flat blade screw driver in one of the slots at the bottom of the faceplate.
- 2: Rotate the screw driver to release the faceplate from the receptacle.

Please email us with any questions or feedback you might have about our products to support@ezq.com.